



TRONIANI


Manual




# In the Box

## Product Guide

**Caution:** Do NOT attach mouthpiece before filling as it may lock irreversibly.

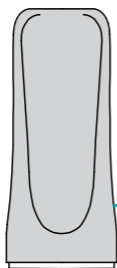

MOUTHPIECE

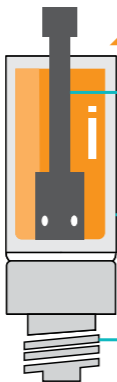

FILL HERE

VAPOR PATH

GLASS TANK

510 THREADED  
BASE

# How to Use

## Filling Instructions

1. Remove mouthpiece from the cartridge.
2. Discard the separator ring that separates the mouthpiece and the glass tank.
3. Position the cartridge upright and insert the filling needle in the space between the vapor path and the inner wall of the glass tank.
4. Immediately after filling the cartridge, align the mouthpiece with the cartridge and push or twist the two together (depending on the type of mouthpiece) until sealed. Avoid delays in attaching the mouthpiece to the cartridge as this will increase the probability of leakage. Low-viscosity formulations require immediate capping.
5. Allow 24 hours for the cartridge core to wick (absorb) high-viscosity formulations; low-viscosity formulations require up to 1 hour.

# How to Use

## Pre-Filled Cartridge

1. Screw the TRONPOD™ onto a 510 threaded battery making sure that it is twisted in completely. Do not overtighten the TRONPOD™.
2. Inhale from the TRONPOD™ mouthpiece while powering the TRONPOD™ by activating the power supply.
3. The resistance of the TRONPOD™ is 1.2  $\Omega$ , for best results use the TRONPOD™ with a compatible TRONPOD™ battery. Otherwise, the recommended setting for the 510 threaded battery/power supply should have a voltage range of 3.0 V – 4.2 V.
4. The TRONPOD™ is empty when vapor is no longer being produced after activation. The cartridge may still produce some vapor after it appears empty due to the remaining amount wicked within the core.

# Storage

- Keep the TRONPOD™ and its components out of reach from children and pets.
- It is recommended to store filled cartridges in a cool & dark place.
- Do not store near heat sources.
- Do not expose to extreme temperatures.
- To minimize leaks due to extreme temperatures or temperature fluctuation, which can occur if left in the car and under strong sun radiation, it is recommended to keep the TRONPOD™ within the range of 5 °C (40 °F) to 30 °C (85 °F). If these extreme temperatures cannot be avoided, keep cartridge upside down.
- If taken on airplanes or high altitudes, keep TRONPOD™ upside down, when storing to avoid leaks.
- Orientation during ordinary storage should either be sideways, or the mouthpiece pointing upwards. Only at extreme temperatures or high-altitude conditions should the cartridge be kept upside down.

## Warnings

- Do not open or touch internal parts when powered on, when hot, or in use.
- Do not disassemble or tamper with the internal components.
- Do not use if damaged or broken.
- Do not operate in an unusual manner.
- Do not use with tobacco, e-juices, or e-liquids.
- Do not use a power supply which has a higher output than the recommended voltage range.

## Compatibility

TRONIAN™ only uses high-quality materials that are selected in order to have broad compatibility and chemical resistance with the contents of the cartridge. The variety and chemical composition of the potential contents is vast. TRONIAN™ has

tested the most relevant extracts. Nonetheless, TRONIAN™ cannot rule out any incompatibility that may occur. Therefore, TRONIAN™ recommends testing for incompatibilities beforehand by the processor. TRONIAN™ provides assistance to the best of its capabilities under [info@tronian.com](mailto:info@tronian.com).

## Disclaimer

The TRONPOD™ is not a medical device and cannot diagnose, treat, or cure any illness or medical condition. If you have health problems, consult a physician before using the TRONPOD™. The TRONPOD™ is not intended to be used with any illegal, medicinal, or unregulated substances. Any improper or illegal use of this product will void the limited warranty. The TRONPOD™ is not a smoking cessation device.

# Warranty

TRONIAN™ adheres to strict quality control standards and only offers high-quality products that are vigorously tested. In case of quality impairments or defects of TRONIAN™ products, the following warranty conditions apply.

The limited warranty described herein does not cover the reimbursement or replacement of the contents that may have been filled into the cartridge.

## Warranty for Empty Cartridges

The TRONPOD™ has a six (6) month limited warranty on the hardware and is guaranteed against defects in materials and workmanship. To verify the date of retail purchase by the original customer, a proof of purchase is required from a sanctioned retailer. At its discretion and to the extent permitted by law, Thermodyne



Systems (TRONIAN™) will exchange the product with a product that is new, or is a functionally equivalent product, if the product develops any mechanical defects and a claim is filed within the warranty period. The warranty period starts from the date of retail purchase and does not restart after a warranty claim has been issued.

All products submitted for warranty become the property of TRONIAN™. The customer covers the shipping costs for warranty support. If you have issues with your product, send an email to [info@tronian.com](mailto:info@tronian.com) and a customer service representative will contact you as early as possible to resolve the issue and find the best solution.

# Warranty

## Exclusions and Limitations

The limited warranty only applies to devices manufactured by Thermodyne Systems (TRONIAN™) that can be identified by the “TRONIAN” trademark, trade name, or logo affixed to them and were purchased at an authorized retailer who is fulfilled by an authorized distributor.

The limited warranty does not apply to:

- Normal performance degradation of materials, parts vulnerable to wear and tear, natural battery degradation, any arising damages due to the user's neglect, or any inappropriate use
- Any case in which the internal components of the product are purposely dismantled, tampered, or accessed in any fashion
- A part or product that has been altered to modify capability or functionality

- Damage caused by use of fast chargers or any charger with non-standard voltage and current ratings; Thermodyne Systems recommends to use a charger with the rating 5V = 1A
- Damage caused by the use of the product outside the intended function as described by TRONIAN™
- Damage resulting from non-adherence with the instruction manual
- Aesthetic damage, including but not restricted to dents, scratches, deformity, and parts broken through product usage
- Damage caused by abuse, misuse, accident, flood, fire, earthquake, or other external causes

Leakage of the contents from the product is not covered under warranty, unless sufficient evidence of defects or quality impairments of the product, having caused leakage, is provided. TRONIAN™ does not have control over inadequate processing, filling, storage, or transport

conditions, impacting leakage.

The limited warranty is non-transferable and only applies to the original purchaser. If you have purchased through a 3<sup>rd</sup> party reseller such as eBay, Kijiji, Craigslist, or any other unauthorized retailer, then the limited warranty does not apply. TRONIAN™ warranties only apply to products purchased at any authorized retailer fulfilled by an authorized TRONIAN™ distributor. For inquiries pertaining to authorized retailers, please contact us.

## Return Policy

Please research the product you are interested in before purchasing. Refunds can only be considered for new, unused, and unopened products at the discretion and under the terms of the authorized retailer. Refund details and terms differ for each authorized retailer and must be acquired from their customer support or website. No refund can be made if the tamper-proof seal is broken or the plastic film is damaged or removed. Products purchased through an unauthorized retailer are non-refundable from TRONIAN™.

# Counterfeiting

Our long-term commitment to combat unauthorized sales and counterfeiting is to ensure the quality of services from TRONIAN™. TRONIAN™ is devoted to ensuring that our clients get the brand's up-to-date technologies, attractive form, and top-tier assistance.

TRONIAN™ warns consumers to be prudent when purchasing TRONIAN™ products from unauthorized suppliers as the quality, dependability, and safety of these products are unknown and, in some cases, can expose the consumer to hazards that do not occur with genuine TRONIAN™ products.

TRONIAN™ has a devoted team that actively tracks and inspects unauthorized suppliers and counterfeiters to safeguard clients and business partners. Because many people do not comprehend the worldwide influence of counterfeiting or the cycle of harm they assist when

buying counterfeit goods. By discovering counterfeiters and facilitating legal action against these entities, we believe we are doing our part.

While TRONIAN™ is dedicated to aiding victims of counterfeiting, we cannot refund money used to purchase infringing products, as these products were not bought from TRONIAN™, neither can we help in resolving disputes, including support through PayPal or credit card refunds.

Contact TRONIAN™ support to discover more about authorized suppliers, as any product purchased outside of our exclusive sales network has a chance of being counterfeit and is not protected under our warranty.

## **Warranty for Filled (Pre-Filled) Cartridges**

Warranty of filled (pre-filled) product is honored by TRONIAN™'s partners processing (filling) TRONIAN™'s product (the processor), or their authorized distribution or retail partners. The processor's warranty conditions apply. Any warranty claim of the filled product shall be addressed to the processor, their authorized distribution or retail partners. TRONIAN™ cannot rule out inadequate processing conditions of TRONIAN™'s products during filling that may have compromised the product.

## **Recycling**

The TRONPOD™ should be recycled and disposed of in accordance with local requirements to prevent potential harm to the environment and to human health.



# Certification

**MARKINGS:**



**CERTIFICATE:** Federal Communications Commission

**STATEMENT:** This device complies with Part 15 of the FCC Rules. Operation conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**MARKINGS:**



**CERTIFICATE:** Conformité Européenne (European Conformity)

**STATEMENT:** This device conforms with health, safety, and environmental protection standards for products sold within the European Economic Area.

# Certification

**MARKINGS:**



**CERTIFICATE:** Waste Electrical and Electronic Equipment Directive (WEEE Directive)

**STATEMENT:** This device is considered an electrical or electronic waste and should not be treated as household waste. The device should be disposed of through an established municipal collection point for WEEE.

**MARKINGS:**



**CERTIFICATE:** Restriction of Hazardous Substances in Electronic Equipment

**STATEMENT:** This device complies with the regulations and restrictions of RoHS.

Find more information here:



[www.tronian.com](http://www.tronian.com)  
[info@tronian.com](mailto:info@tronian.com)

Thermodyne Systems  
1243 Islington Ave. #800,  
Totonto, ON - M8X1Y9